

## PREMIUM BAR FRIDGE

### GMF229FZ



- Make a stylish and functional addition to your outdoor room
- Stainless steel exterior finish
- Stainless steel interior mirror finish
- Triple glazed glass door
- Designed for outdoor undercover use - IPx4 rated
- Front vents allow installation in cabinetry with minimal clearances
- Adjustable thermostat for temperature control
- Self closing door with magnetic door seal
- Heated door to reduce condensation
- Internal light
- Adjustable shelves
- Height adjustable feet
- Optional granite top available - Model No. ZGGTFTOPK

Ziegler & Brown® is a registered trademark of Barbeques Galore (Aust) Pty Ltd


---

**Important:** Retain these instructions for future use

---

## PRODUCT DESCRIPTION

Inspect contents of the box to ensure all parts are included and undamaged

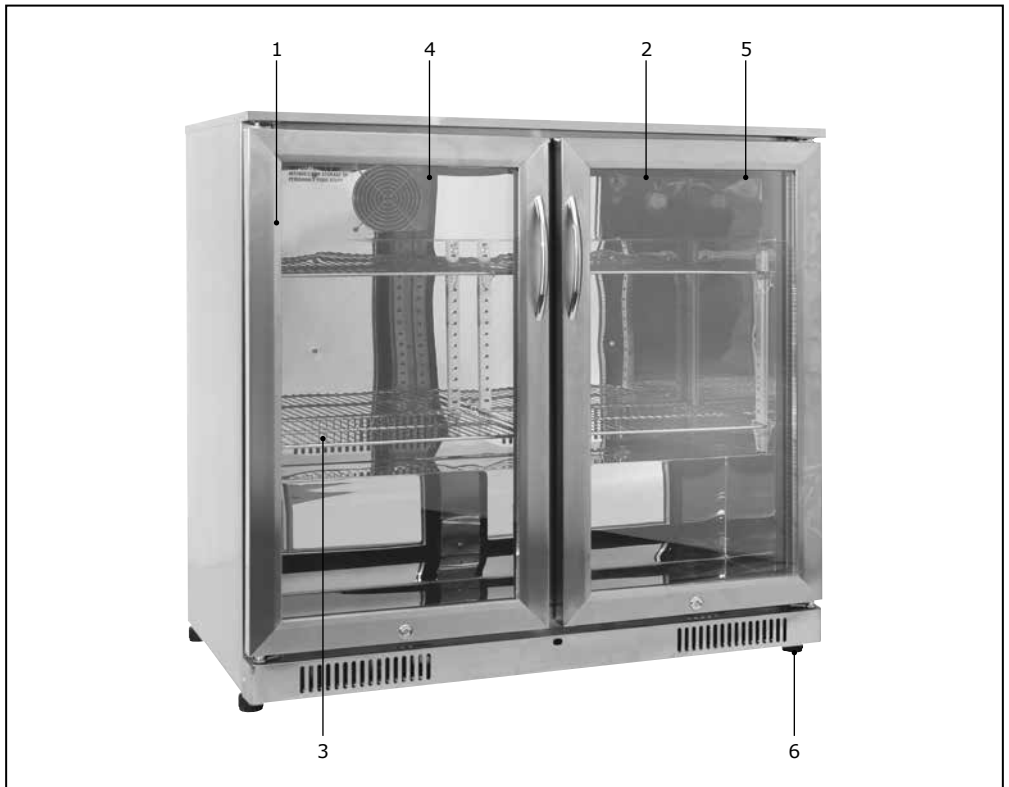

1. Triple glazed glass door (s).
2. Adjustable thermostat control inside fridge.
3. Adjustable shelves.
4. Light is located at the top front of fridge cabinet.
5. Light switch is located to the top right of the fridge cabinet.
6. Height adjustable feet.

# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

## Electrical Installation

The electrical system of this bar fridge must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

## Safety

Before attempting to operate this bar fridge, the following basic safety precautions should be taken to reduce the risk of fire, electric shock and personal injury. It is important to read the instruction manual and to understand it's applications, limitations and potential hazards associated with this bar fridge. This bar fridge is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. This bar fridge is not designed for use within 1m or above a water source. It is important that you read, understand and follow these instructions very carefully. They are designed for the safety of yourself and others ensuring a long and trouble free service life from your bar fridge. This electric bar fridge complies with Australian and International standards and safety requirements. Repairs should only be carried out by qualified persons using original spare parts. Failure to do so may result in considerable danger to the operator.

## Safe Operation

### Beware of Children and Pets

Children should not be allowed to touch or operate bar fridges or touch extension cords, if used. All bar fridges should be kept out of reach of children, preferably stored or locked in a secure room when not in use.

### Do Not Abuse the Power Cord

Never yank or pull on the power cord to disconnect it from the mains supply socket. Never carry or move your bar fridge by it's power cord. Keep the power cord away from heat, oil, solvents and sharp edges. Check the power cord regularly for any damage and if the power cord becomes damaged have it replaced by an authorised service facility.

### Extension Cords and Reels

This bar fridge is NOT designed to run off an extension cord. If you require an additional power point please have one installed by a qualified electrician.

The use of extension cords may cause power voltage loss which will result in damage to the compressor this will NOT be covered under warranty.



## FOR YOUR SAFETY

**NOTE:** If using the bar fridge outside in an alfresco area ensure that it is directly connected to an outdoor weatherproof power point.

Although this fridge is suitable for outdoor use, for best performance and durability, ensure it is not left in the weather or in direct sunlight, the ideal location is outdoor undercover.

The electrical system of this bar fridge must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

All electrical connections are to be made in a dry area.

Outdoor power points must be weatherproof and installed by a qualified electrician.

Sitro Group Australia Pty Ltd is not responsible for incorrectly located bar fridges.

# Specific Safety Instructions



## WARNING

Do not use the bar fridge in areas where there is a risk of explosion or fire from flammable gases. Ensure that the area is kept clear of combustible materials. Do not use the bar fridge in damp areas, without suitable ventilation. This bar fridge is not designed for use within 1m or above a water source. Do not place within one metre (1m) of any water source.

Fire risk exists if this bar fridge is covered by or positioned close to curtains or other combustible materials.

- This bar fridge is intended for domestic / household use only.
- DO NOT use this bar fridge in either the bathroom or ensuite.
- DO NOT use a 3rd party timer, or programmable system with this bar fridge.
- DO NOT clean the bar fridge while the bar fridge is on or plugged into the mains power supply.
- DO NOT attempt to modify the bar fridge, power cord, power plug or the supplied accessories in any way.
- This fridge is designed to withstand light rain. However, as rain and wind direction and strength are uncontrollable, this fridge is only warranted for undercover outdoor use.
- When exposed to direct sunlight the fridge will usually not perform optimally and some components will degrade faster than if the fridge was shaded. We recommend positioning the fridge to always avoid direct sunlight.
- This fridge is not designed to withstand any immersion in water whatsoever. For this reason it should not be exposed to damp or wet areas.
- NEVER use with the power cord coiled, bundled up or tied up. Always extend fully before use.
- NEVER use the bar fridge if any part of it is damaged.
- Ensure that the bar fridge is disconnected from the mains supply when installing, cleaning or removing.
- Always turn the bar fridge OFF at the power point switch when not in use for extended periods of time.
- Always ensure that the power cord is fully extended
- Always ensure that the bar fridge is kept clean and free from dust.
- Never use bar fridge with cracked/broken glass - replace glass before use.
- Only use this bar fridge on flat and level ground.
- Before you throw away your old bar fridge, take off the door, leave the shelves in place, so that children may not easily climb inside.
- Never allow children to operate, play with or crawl inside the appliance.
- This bar fridge is not designed for perishable foods. It is a drinks bar fridge.
- Adults and children should never sit or stand on the fridge as injury may occur.
- Do not expose this fridge to water under pressure (e.g. a garden hose or child's water pistol).



## WARNING

- When you dispose of your old bar fridges and freezers, remove any doors. Children can suffocate if they get trapped inside.
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.
- The appliance must be plugged into its own dedicated 220-240V, 50Hz AC electrical outlet.
- Ensure that the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- The electrical system of this bar fridge must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.
- Do not use an extension cord or adaptor plug.
- Unplug the appliance before cleaning.
- Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out of the receptacle to prevent damaging the power cord.
- Chose a location that is not too cold - the ambient temperature should be above 8°C.
- Chose a location that is not affected by direct sunlight so that the fridge performs to its' optimal ability.
- Chose a location that is not affected by direct rain, install undercover only.
- Put the appliance in a dry place, avoiding areas of high moisture or humidity.
- Don't put the appliance near stoves, fires or heaters.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process. Do not use an electrical appliance inside the appliance.
- If power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

## Protect from Moisture

Avoiding placing the bar fridge in a place where heavy moisture is present so as to minimise possibility of rusting of metal parts. The bar fridge should be kept out of water or direct sprayed water, failure to do this could cause poor performance and/or an electrical short could occur. Choose a location that is not affected by direct rain, install undercover only.

## Protect from Heat

The bar fridge should be protected from excessive heat sources and out of direct sunlight, so that optimal performance is not affected.

## Protect from Cold

The bar fridge should be protected from excessive cold weather and frosts. Suggested minimum ambient temperature should ideally be higher than 8°C, so that optimal performance is not affected.

## Moving

When moving, the bar fridge cannot be reclined to more than 45°. Any greater angle may damage the cooling system.

Never move the bar fridge while it is plugged in and operating.

Once you have moved the bar fridge, leave standing in a level position for 4 - 6 hours so that the gas can settle.

## Positioning

Ensure the sides, top and rear have at least 10mm clearance to ensure adequate ventilation.

Never cover the bottom front grill as this is required for correct ventilation.

After installation the appliance should be left for 4 - 6 hours before it is switched on in order to allow the refrigerant to settle.

## Disposal of Old Appliances

The majority of components are recyclable, however there are also dangerous chemicals inside. To dispose of old fridges remove the doors and contact your local council for recycling options.

## Electrical Installation

The electrical system of this bar fridge must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

# IMPORTANT

## Electrical Data

This product is fitted with a sealed electrical connection plug that is compatible with the fridge, the mains supply for Australia and meets the requirements of international standards. This fridge must be connected to a supply voltage that is equal to that stated on the rating label.

If the mains connection plug or power cord becomes damaged it must be replaced with a complete assembly that is identical to the original, and this must be replaced by an authorised service centre. Always follow the Australian requirements for connection to the mains supply. If in doubt always consult a qualified electrician.

Note: Before using your fridge, unpack and correctly position. Once in position leave to stand for around 4-6 hours before turning on for the first time.

## Glass Doors

These glass doors are heated to reduce the chance of condensation building up during times of high humidity and on very cold days.

These doors will be warm to touch. This is not a fault.


## USING YOUR BAR FRIDGE

### Temperature Control

- The first time you turn the unit on, set the temperature control to position “Max”.
- The settings of the temperature control are “Min, Mid, Max”. After 6 hours you can adjust the temperature control setting to suit the types of drinks being cooled.
- To turn the bar fridge off, turn the temperature control to “Min”.

### Note

- Turning the temperature control to “Min” position stops the cooling cycle, but does not shut off the power to the bar fridge.
- If the unit is unplugged, turned off or power is lost you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart without waiting, the bar fridge will not start and may damage the compressor.

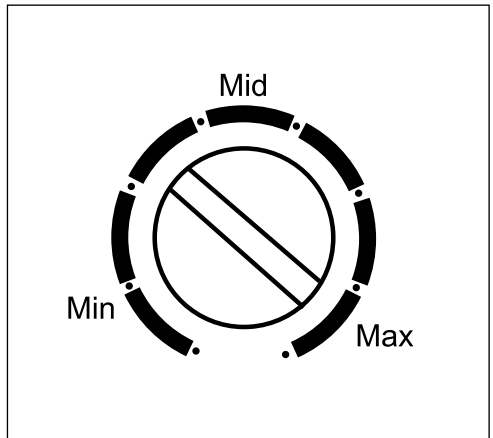

### Internal Light

It is recommended that the internal light only be switched on when required.


To turn on push the switch to on marked 'I'.

To turn off push the switch to off marked 'O'.

### To Replace Light

Note: Ensure bar fridge is turned off and the power lead disconnected from the power point.


1. Fridge off and unplugged.
2. Remove screws and clear plastic cover.
3. Twist fluorescent tube out of holder.
4. Fit new fluorescent tube.
5. Fit clear plastic cover using screws, tighten.
6. Turn fridge on.

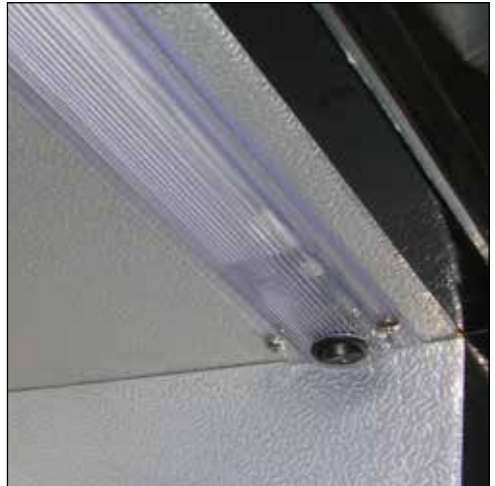

## STABILISING FEET

These are already fitted to your fridge. Before turning your fridge on please ensure your fridge is level front to back and side to side.

1. If your fridge is not level use the fitted stabilising feet to level.
2. To level, first loosen the locking nut.
3. Adjust the stabilising foot until the fridge is level.
4. Once level, lock the stabilising foot by screwing the locking nut up to the underside of the fridge body.

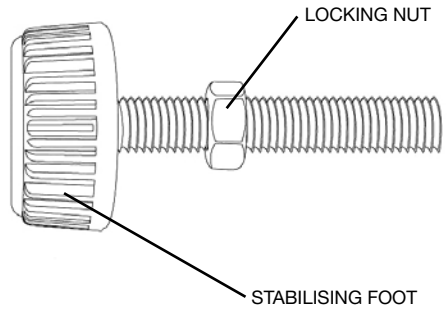

## USING STABILISING FEET WITH:

### Grand Turbo BBQ Series Marble Top

(top sold separately)

1. Place Marble Top onto fridge as per top instructions.
2. If the overall combined unit is too low unscrew each of the 4 stabilising feet so that the combined unit is the same height as the BBQ and modules.
3. Check combined unit is level.
4. If the fridge is not level follow the "STABILISING FEET" instructions above to adjust.



## MAINTENANCE

- The bar fridge should be cleaned and maintained once a month with a soft clean cloth.
- When performing maintenance, make absolutely sure that the power plug is first disconnected from the power outlet.
- Wipe the inner and outer surface of the bar fridge and its accessories with soft clean wet cloth. If they are too dirty, scrub them with neutral detergent, and then clean them with water and dry them with a clean cloth.
- Never use hot water, petrol, alcohol, kerosene, abrasive powder, alkaline detergent, acid, oven cleaners, etc. These could damage the lacquer finish and plastics.
- If the plastic parts in bar fridge become contaminated by oil (animal or vegetable), they could become brittle and possibly cracked.

## TROUBLE SHOOTING

### 1. If the bar fridge does not work:

Check if there is a power failure.

Check if the power plug is plugged into the power outlet.

Check that the R.C.D. has not been tripped.

If ambient temperature is above 40°C the Thermal Safety Cut may have operated. Check if unit has restarted once ambient temperature is below 25°C.

### 2. If the bar fridge is cooling excessively:

The temperature control dial may be set too high. If you place drinks containing a lot of water directly under the cool air outlets they may freeze. This does not indicate a malfunction.

### 3. If the bar fridge is not cooling sufficiently:

The drinks may be packed too tightly together which will block the flow of cool air. You may have put something hot or a lot of drinks into the bar fridge. The door may not have closed properly. There may be insufficient clearance between the bar fridge and the other surfaces, both sides, back and above. The temperature control dial may not be set low enough.

### 4. If condensation forms on the outside of the bar fridge:

Small amount of condensation may form on the outside when the humidity is high. It does not indicate a malfunction. Wipe dry with a cloth.

### 5. If you hear a sound like water flowing:

A sound like water flowing is the refrigerant flowing. It does not indicate a malfunction.

### 6. If the cabinets side and front panel heats up:

The front and side panel of the cabinet will heat up when the door is opened and closed frequently, when starting the unit and when the unit operates in summer with high ambient outside temperature. Do not touch the front or side panel, it is a result of heat from inside the cabinet. It does not indicate a malfunction.



## CAUTION

- Never lick icy drinks when they first come out of the fridge. This can freeze burn your lips and mouth.
- If the supply cord is damaged, it must be replaced by professional electrician. The cord must be replaced with a cord of the same specification.
- Before you throw away your old bar fridge, take off the door, leave the shelves in place, so that children may not easily climb inside.
- Never allow children to operate, play with or crawl inside the appliance.
- This bar fridge is not designed for perishable foods. It is a drinks bar fridge.

# TECHNICAL SPECIFICATIONS

Specifications are subject to change without prior notice.

If the technical specifications are different from the plate on the back of the bar fridge, please refer to the plate.

Model	GMF229FZ
GLG Model No.	ZGGTFRIDGEK
Doors	2
Capacity	228L
Rated Voltage	220 ~ 240V AC
Rated Frequency	50Hz
Rated Current	2.1A
Rated Input Power at 240V AC	360W
Energy Consumption	2.77 kW·h/24h
Light	14W
Lamp Type	T5
Noise Level (db@3m)	52 db
Refrigerant	R134a
Refrigerant Charge Volume	120gm
Foam Blowing Agent	Cyclopentane
Nett Weight	52kg

# ZIEGLER & BROWN FRIDGE - WARRANTY STATEMENT

**SITRO GROUP AUSTRALIA (S.G.A.) WARRANTS THE PURCHASER OF THIS PRODUCT AGAINST DEFECTS IN WORKMANSHIP AND MATERIALS FOR THE FOLLOWING PERIODS FROM THE DATE OF PURCHASE:**

**For domestic use, this table applies: -**

Fridge Body Stainless Steel	1 Year (surface rust excluded)
Fridge Body Powder Coated	1 Year (surface rust excluded)
Compressor	1 Year
All Other Items	1 Year

**For commercial use : - 3 Months**

This warranty is not transferable to a subsequent purchaser if the product is sold by the original purchaser during the warranty period.

If a warranty fault appears within the warranty period, S.G.A. reserves the right to replace or repair the product.

In the event that S.G.A. chooses to replace the product, this original warranty will expire at the original date.

If the product includes various accessories or components, only the defective accessory or component will be replaced or repaired.

S.G.A. reserves the right to replace defective parts of the product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished products of the same type rather than being repaired. Refurbished parts may be used to repair the products.

To make a warranty claim, first contact S.G.A's Customer Service Line on the contact number below.

The purchase receipt for this product is to be retained and must be presented if making claim under the terms of this S.G.A. warranty.

Warranty repairs are free of charge, provided the product is delivered to our Service Department at 33-35 Lionel Road,

Mt Waverley, Victoria, 3149 or to one of our Authorised Service Agents.

If a warranty fault is found the freight cost will be credited to the owner. If no fault is found the product will be returned and any costs associated with the service will be charged to the owner.

Products sent freight forward will not be accepted. In most cases the defective accessory or component only will need to be returned. The product or part of the product being returned must be adequately protected in a box.

S.G.A. will not be responsible for any in-transit loss or damage.

This warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by or as a result of misuse or abuse, negligent handling or storage, normal wear and tear or if the product has not been installed and used in accordance with S.G.A.'s instructions, recommendations and specifications or if the product has been subjected to abnormal conditions. The warranty does not apply to blockages caused by insects or living organisms.

The warranty is void if there is evidence of the product being tampered with by unauthorised persons.

The warranty does not extend to installation or disconnection costs.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded.

**Electric Products Approved For Outdoor Use Only**

For warranty claims, service, spare parts or products information in Australia, please call SITRO GROUP AUSTRALIA Pty Ltd on the Customer Service Line 1300 174 876



**CONTACT DETAILS**  
**Sitro Group Australia Pty Ltd**  
33-35 Lionel Road, Mt. Waverley  
Victoria 3149, Australia.  
Tel (+613) 9543 9533  
Fax (+613) 9543 9839  
sales@sitro.com.au

**For any queries or assistance call**



**Customer Service**  
(Australia Only)

**1300 174 876**

Hours of operation:  
Monday to Friday 8.30am - 5.30pm EST

**Do not return to place of purchase.**

Keep your purchase receipt, this will be required to  
make any claims under the 12 month warranty.

**Ziegler  
&Brown**