



Assembly instructions for your new
















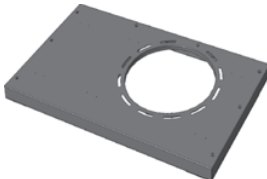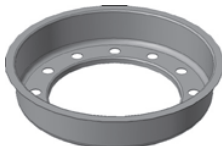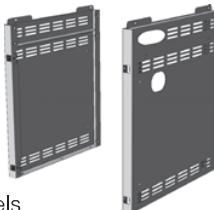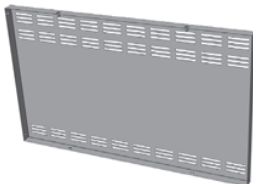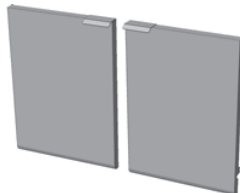


Ziegler & Brown Turbo Barbeque Cart

- **You will need** 2 adjustable spanners + 1 phillips head screwdriver







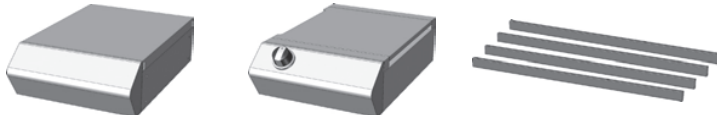











Make sure you have all the parts: **Ziegler & Brown Turbo 4 Burner**

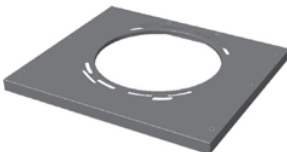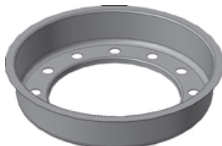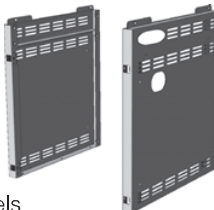Note: the precise shape and form of some parts may differ slightly from that shown. However, the parts will be functional identical.

Ziegler & Brown Turbo 4 Burner Head (Supplied separately)	
	
1 x Turbo 4 burner barbeque	
Parts in the carton of Ziegler & Brown Turbo 4 Burner Cart	
 2 x lock-brake castors 2 x non-lock castors a 2 x castor dress guards	 1 x base panel
 1 x cylinder tray	 1 x pair of side panels
 1 x rear panel	 1 x doors
 1 x top panel	 16 x 16mm screws  26 x 12mm screws  4 (thinner) x 12mm screws  2 x flange nuts (if carts need to be joined)  18 x flat and 16 x spring washers
For Ziegler & Brown Turbo Elite model only	
 3 x storage racks	 6 x 16mm screws
Parts in the carton of Ziegler & Brown Turbo Side Wings (Supplied separately)	
	
1 x left side shelf (or side drawer), 1 x right side burner (or side shelf), and 4 x rails	
 4 x 28mm screws(in each carton)  4 x 10mm screws(in each carton)	

Make sure you have all the parts: **Ziegler & Brown Turbo 2 Burner**

Note: the precise shape and form of some parts may differ slightly from that shown. However, the parts will be functional identical.

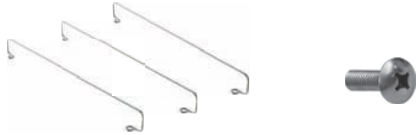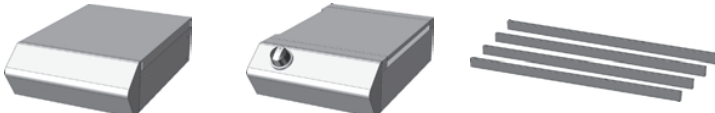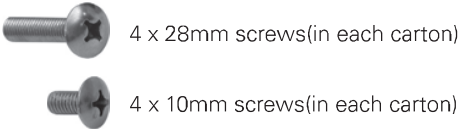Ziegler & Brown Turbo 2 Burner Head (Supplied separately)	
	
1 x Turbo 2 burner barbeque	
Parts in the carton of Ziegler & Brown Turbo 2 Burner Cart	
 2 x lock-brake castors 2 x non-lock castors a 2 x castor dress guards	 1 x base panel
 1 x cylinder tray	 1 x pair of side panels
 1 x rear panel	 1 x doors
 1 x top panel	 16 x 16mm screws  26 x 12mm screws  2 (thinner) x 12mm screws  2 x flange nuts (if carts need to be joined)  18 x flat and 16 x spring washers
For Ziegler & Brown Turbo Elite Model Only  3 x storage racks 6 x 16mm screws	
Parts in the carton of Ziegler & Brown Turbo Side Wings (Supplied separately)	
	
1 x left side shelf (or side drawer), 1 x right side burner (or side shelf), and 4 x rails	
 4 x 28mm screws(in each carton) 4 x 10mm screws(in each carton)	


1 Attach The Two **Non-Lock** Castors

4 Burner Models:

What You Need:

8 x 16mm screws

8 x flat and 8 x
spring washers

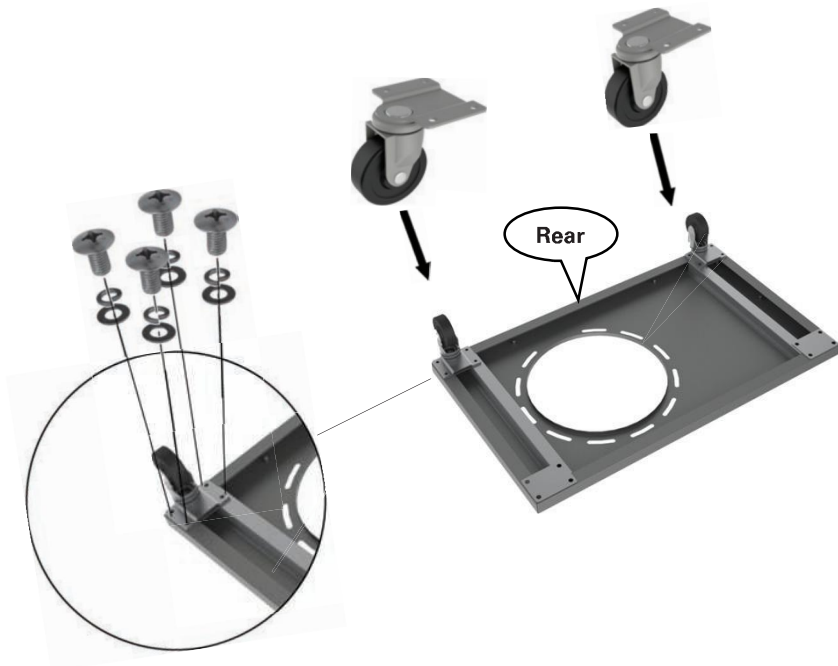

Turn the base shelf upside down so the cylinder hole is on your left.

Screw both **non-lock** castors to the rear of the base shelf, as shown.

2 Burner Models:

What You Need:


8 x 16mm screws

8 x flat and 8 x
spring washers



Turn the base shelf upside down so the 2 screw holes are at the rear.

Screw both **non-lock** castors to the rear of the base shelf, as shown.

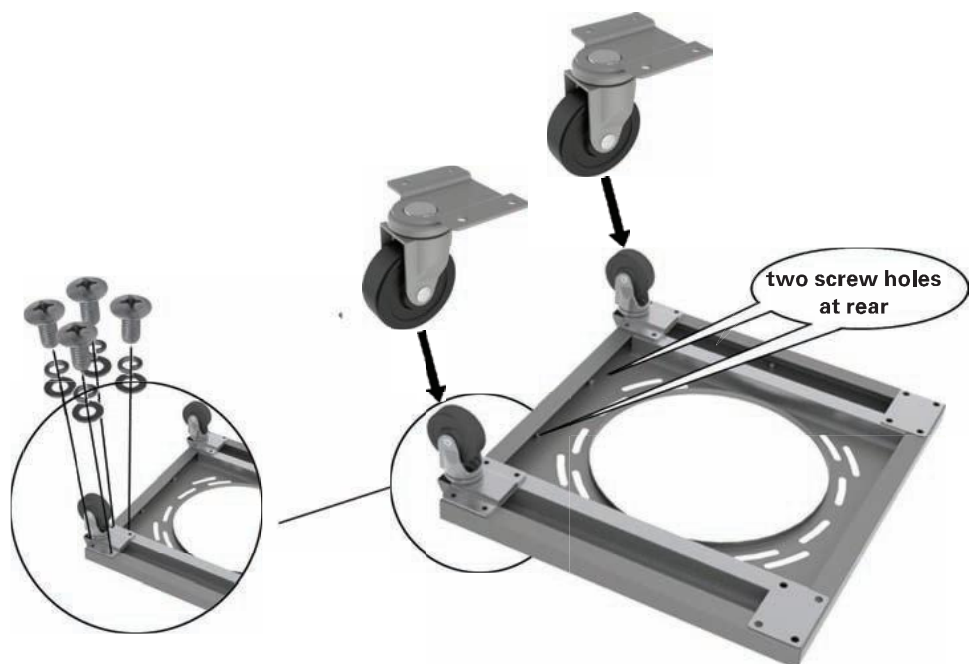

2 Attach The Two **Lock-Brake** Castors

4 Burner Models:


What You Need:

8 x 16mm screws

8 x flat and 8 x
spring washers



Screw both **lock-brake** castors to the front of the base shelf, as shown.

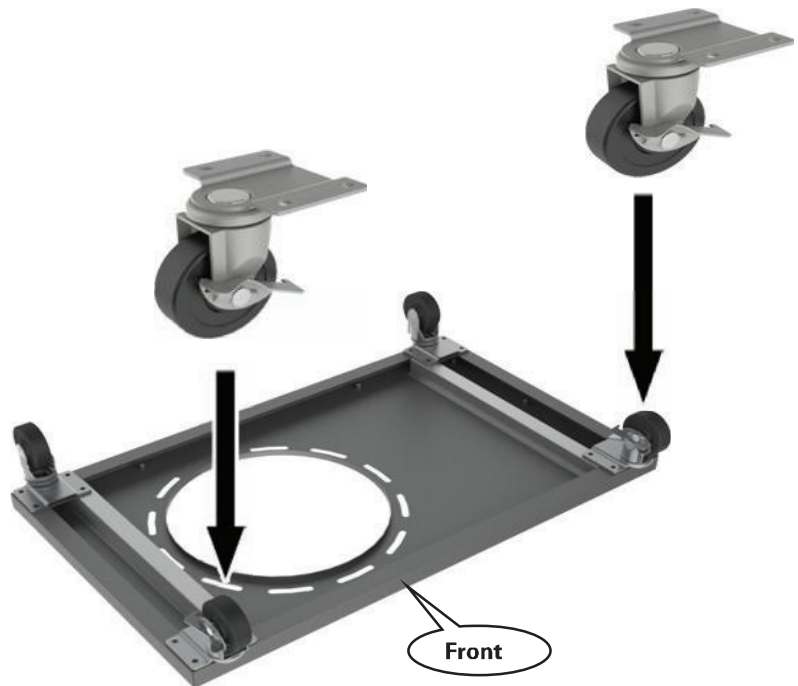

2 Burner Models:


What You Need:

8 x 16mm screws

8 x flat and 8 x
spring washers



Screw both **lock-brake** castors to the front of the base shelf, as shown.

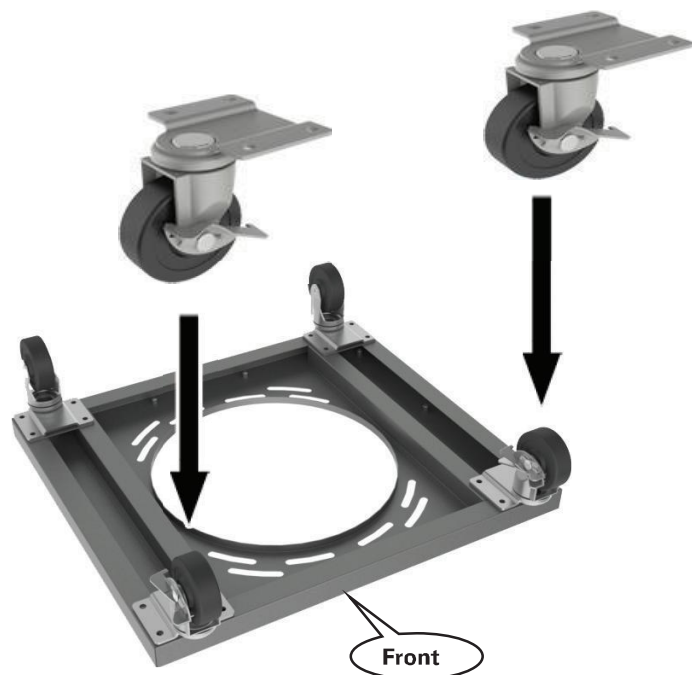

3 Insert The Cylinder Tray


Turn the base shelf the right way up.

Orient the base shelf so the:

4 burner model has the cylinder hole on your right.

2 burner model has screw holes to the rear.

Place the cylinder tray into the cylinder hole in the base shelf.

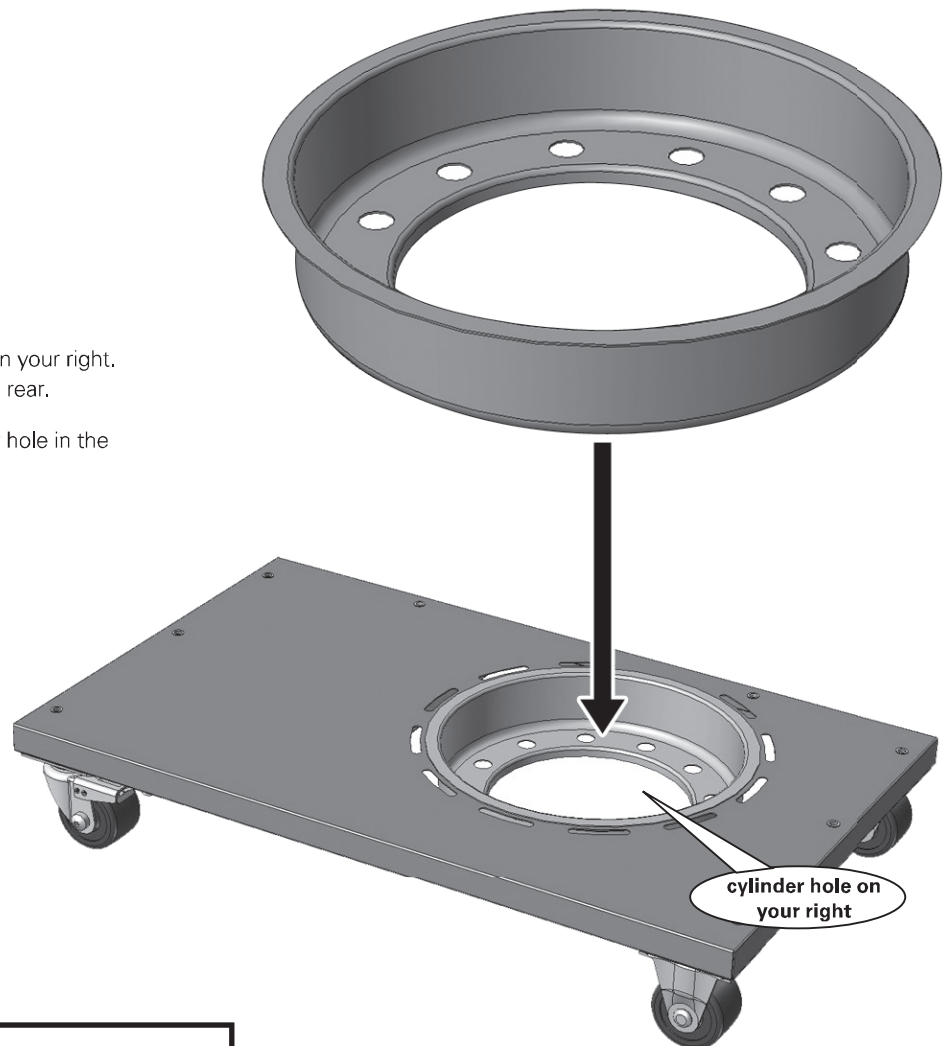


2 Burner Model:



4 Attach The Side Panels

What You Need:

6 x 12mm screws

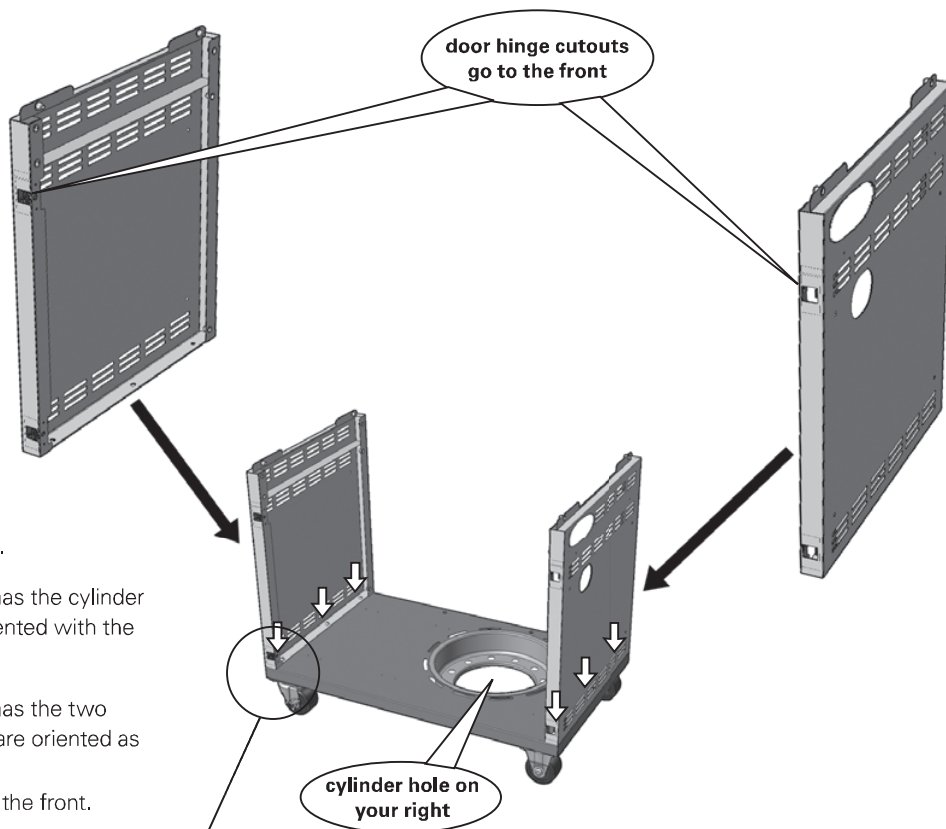


Attach both side panels to the base shelf.


4 burner models: Ensure the base shelf has the cylinder hole on the right. The side panels are oriented with the door hinge cutouts toward the front.

2 burner models: Ensure the base shelf has the two screw holes to the rear. The side panels are oriented as follows:

- Left panel: door hinge cutouts toward the front.
- Right panel: hose cutout toward the front.

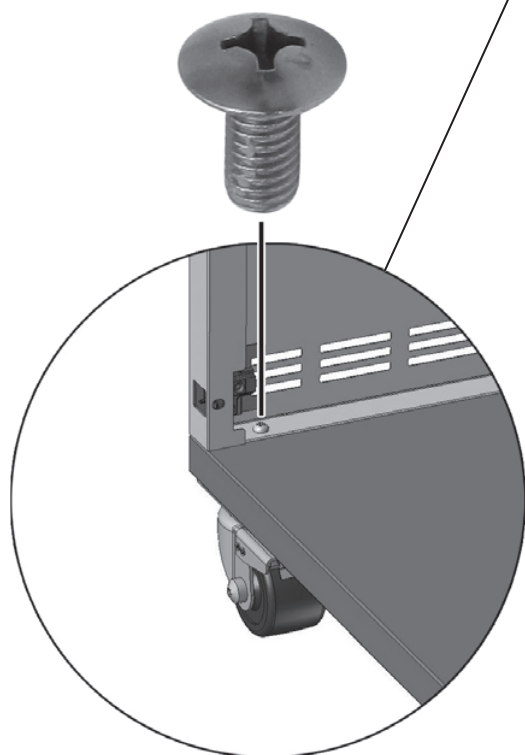

2 Burner Models:

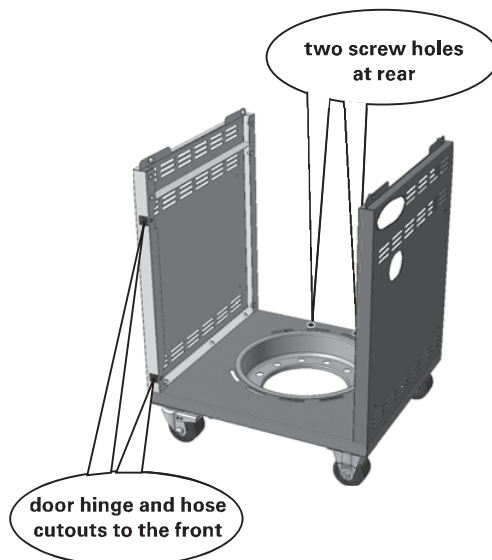

5a

Attach The Rear Panel


What You Need:

6 x 12mm screws



Attach the rear panel to the rear of the cabinet, between the side panels.


Note: Ensure the rear panel is attached with the double set of vents at the top.

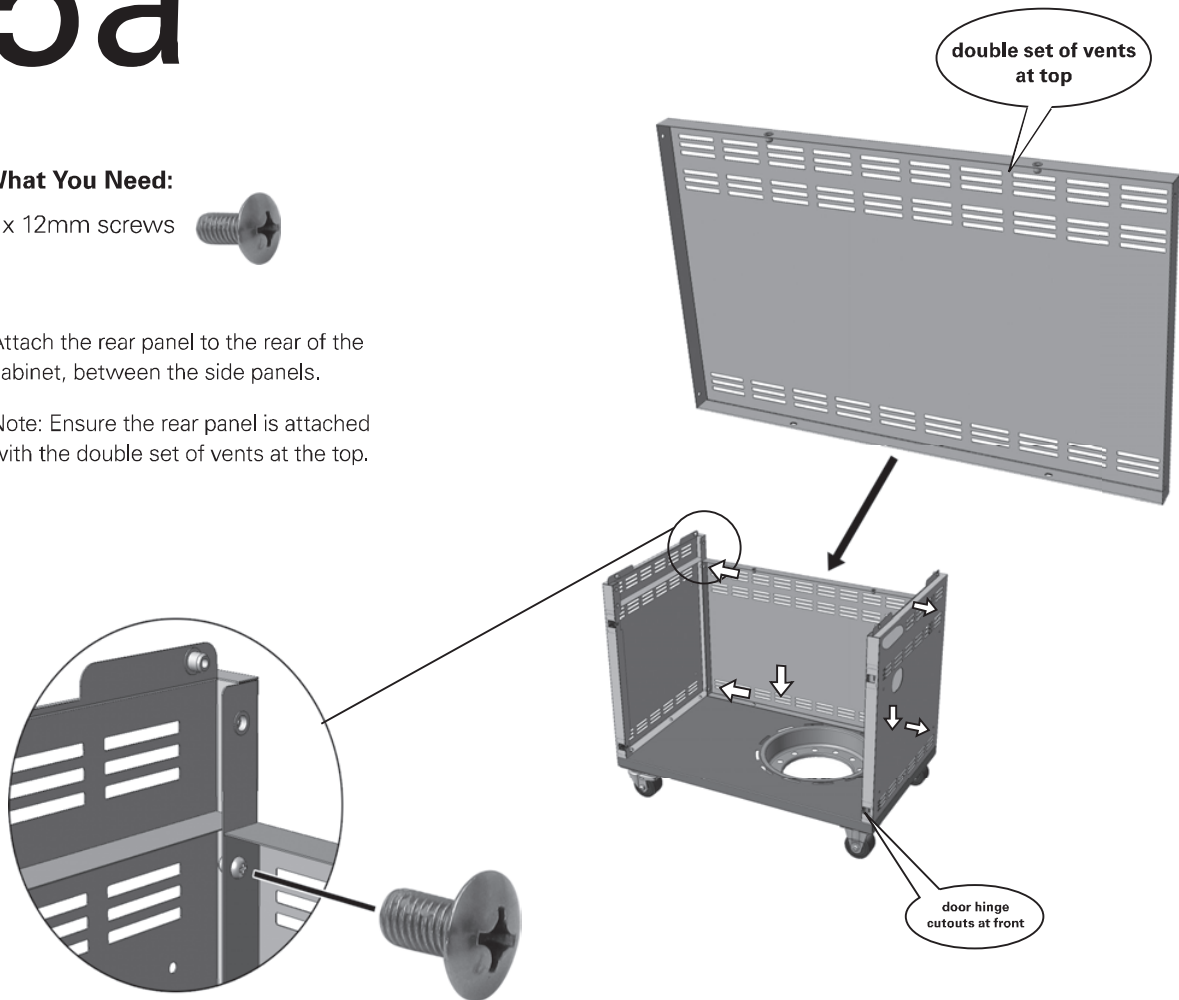

5b

Attach The Castor Dress Guards

Clip the two castor dress guards into place above the rear castors as shown

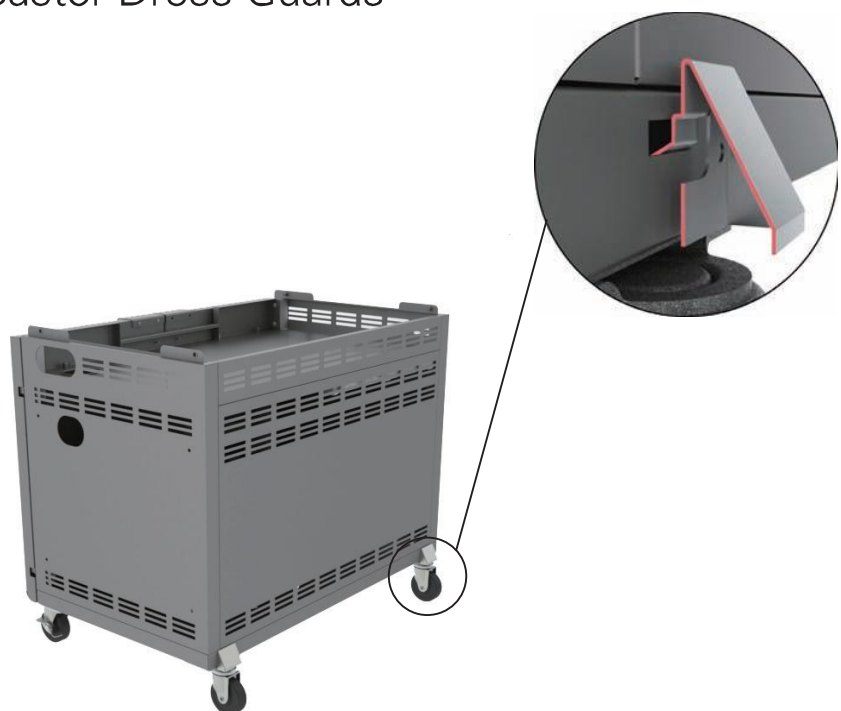

6a

(For Ziegler & Brown Turbo Elite models only)

Attach The Three Storage Racks

What You Need:

6 x 16mm screws



Screw the 3 storage racks to the underside of the top panel as shown. Using 6 x 16mm screws into the nutsert on the top panel



6b


Attach The Top Panel

What You Need:

8 x 12mm screws



a) Use 8 screws to attach the top panel to the side panels, front panel and rear panel.

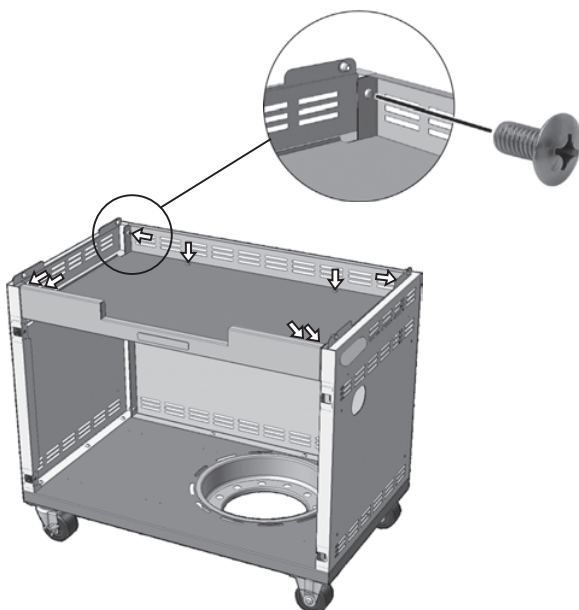

7 Attach The Doors



What You Need:

4 (thinner) x 12mm screws




NOTE: If you are assembling a six or eight burner Turbo bbq, delay this step until after the two barbeque cabinets are joined.

Attach the doors to the side panels.

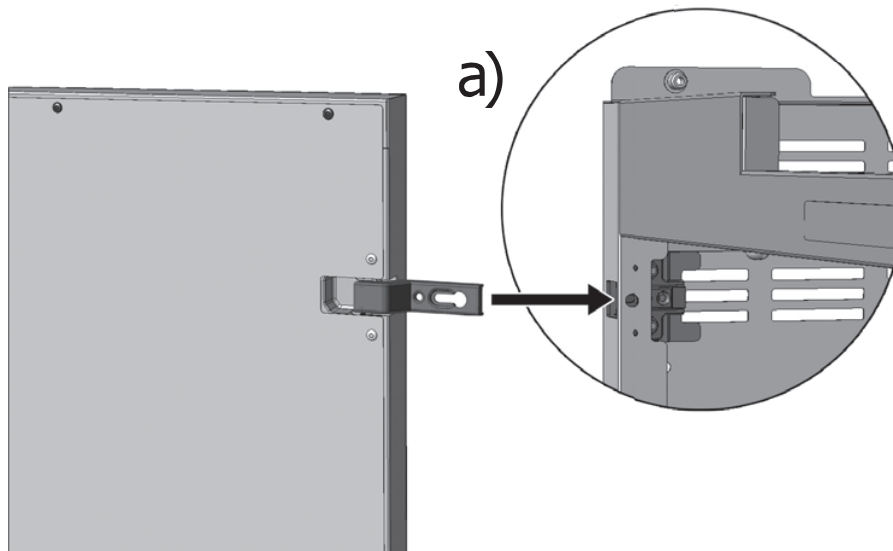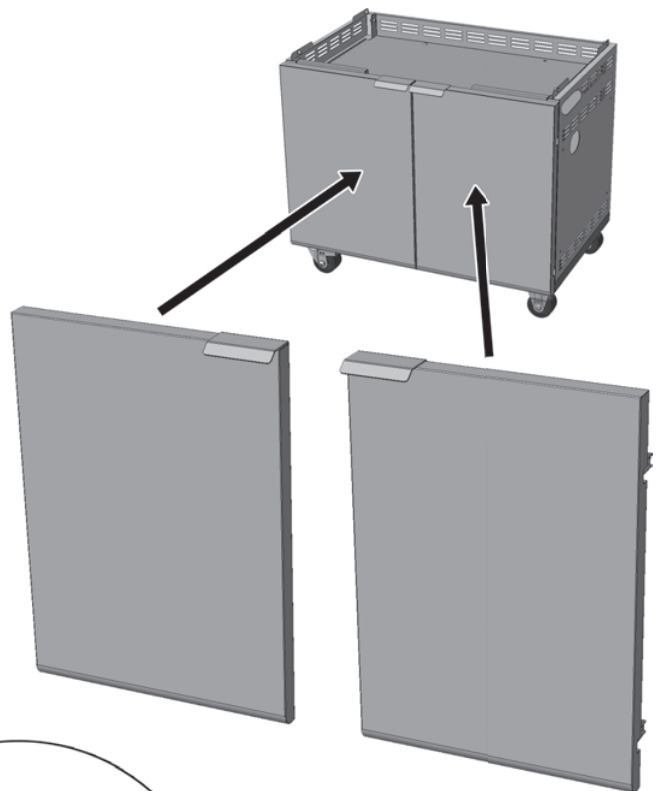

a) Slide the door hinges through the square cutouts in each side panel.

b)

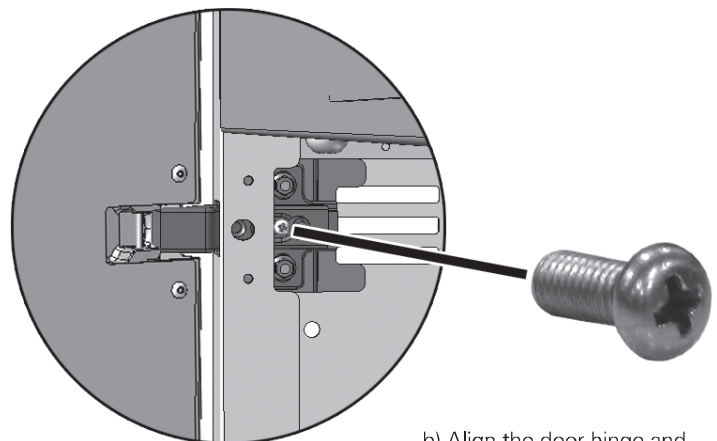


b) Align the door hinge and side panel bracket, then fix a screw through each hinge.

2 Burner Models:

What You Need:

2 (thinner) x 12mm screws

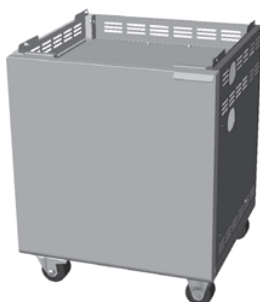



8 Remove Hose (Side Burner Models Only)



Important: If your model does not have a side burner then SKIP this step.

If your model has a side burner, remove the regulator hose from the bbq and put it aside - you will need it later.


Note: You will need to use two spanners to loosen the connection: one to hold the gas inlet pipe, the other to turn the hose fitting.

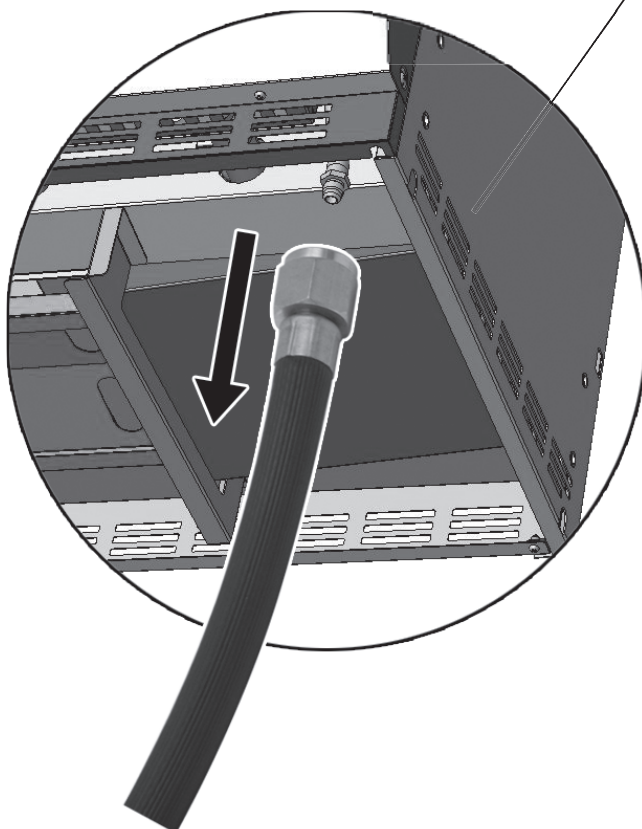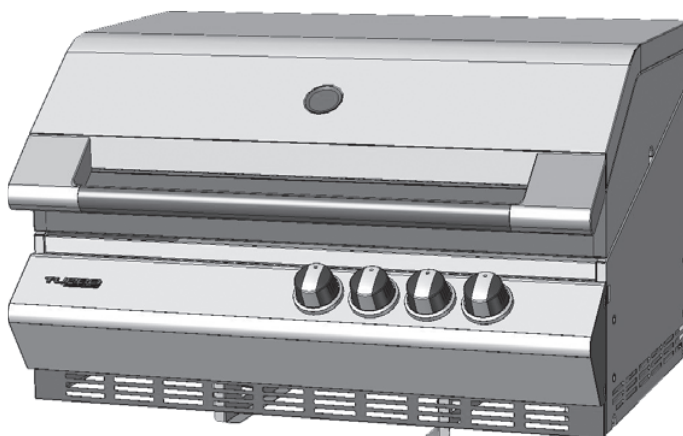

9 Attach The Firebox

What You Need:



4 x 12mm screws

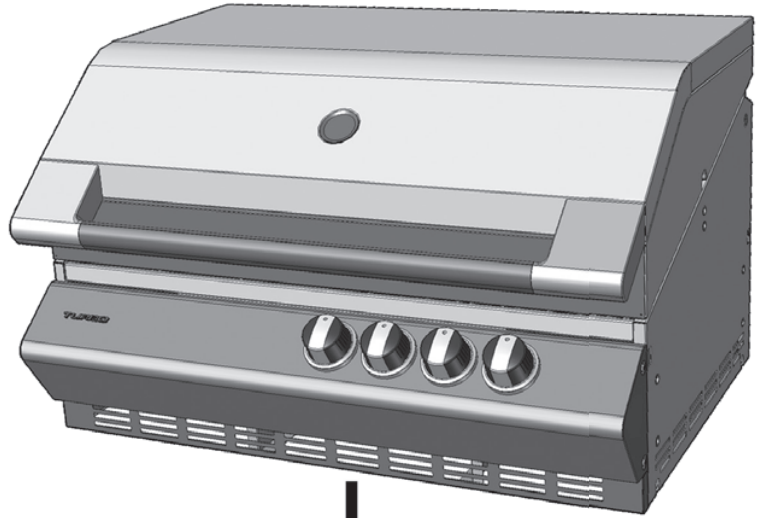

Lower the BBQ onto the assembled cart, ensuring it is facing the same way as the doors.

When positioned correctly, fix a screw through each corner of the firebox and into the cart.

Note – Models with no side burner: as you lower the BBQ, guide the gas hose and regulator down through the rectangular hole in the top panel. If the gas hose and regulator cannot be seen, it may be tucked up underneath the BBQ.

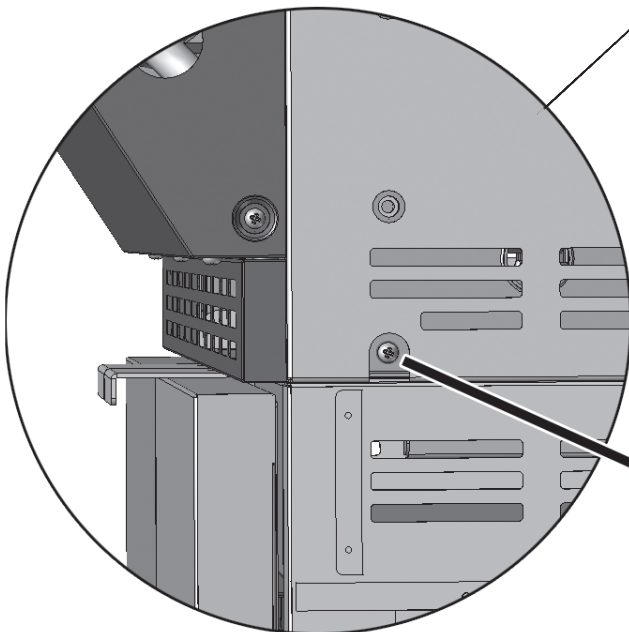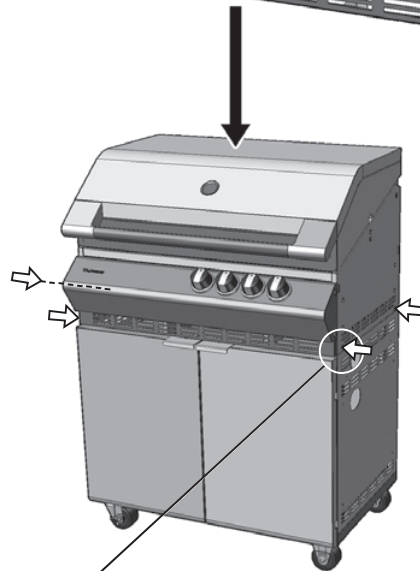

10

Join The Carts (6 & 8 Burner Models Only)

What You Need:

4 x 12mm screws



4 x flange nuts





4 x flat washers



If you have purchased a second unit and are assembling a six or eight burner Ziegler & Brown Turbo bbq, connect the two carts together now.

Fix a screw and matching nut through all four holes in the side panels being connected.

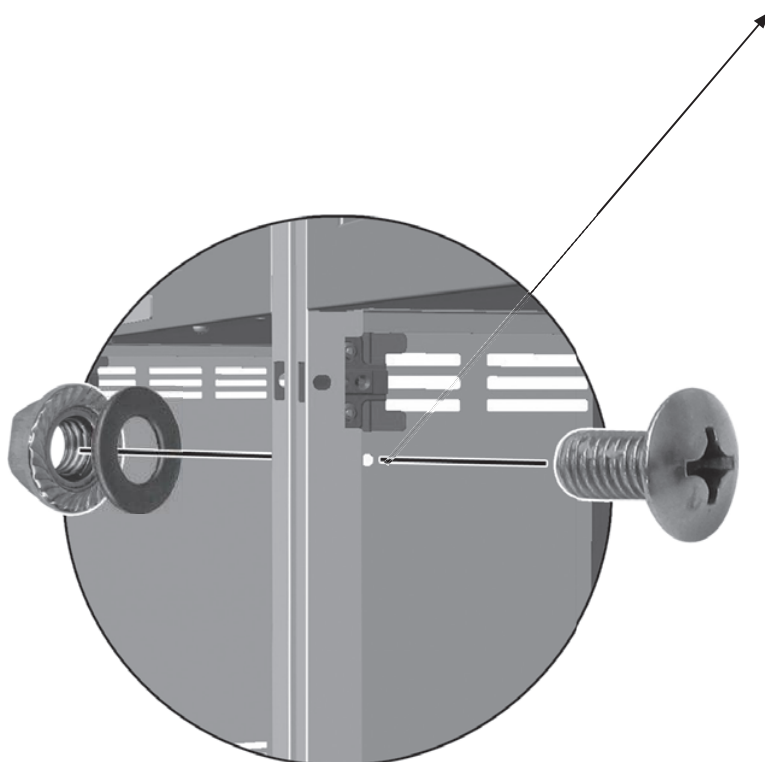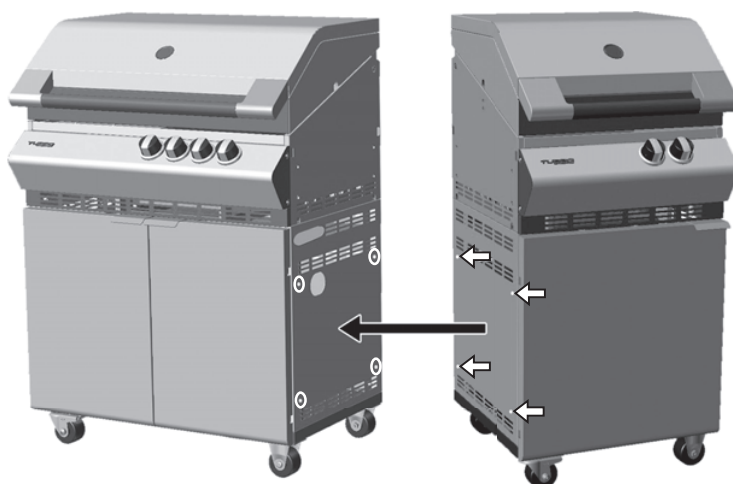

11 Attach Rails To Left Side Shelf

What You Need:

4 x 28mm screws




(for each side shelf or draw)

Before attaching the side shelf to your barbeque you must attach two rails to it.


Turn the side shelf upside down and insert two rails in the direction shown.

Use 2 screws in each rail to secure it to the side shelf.

Note: If your model features a side drawer, you must remove the actual drawer before attaching the rails. Do this by pulling the drawer out as far as possible, then pushing UP on the left lever and DOWN on the right lever, while firmly pulling the drawer out completely – see inset below.

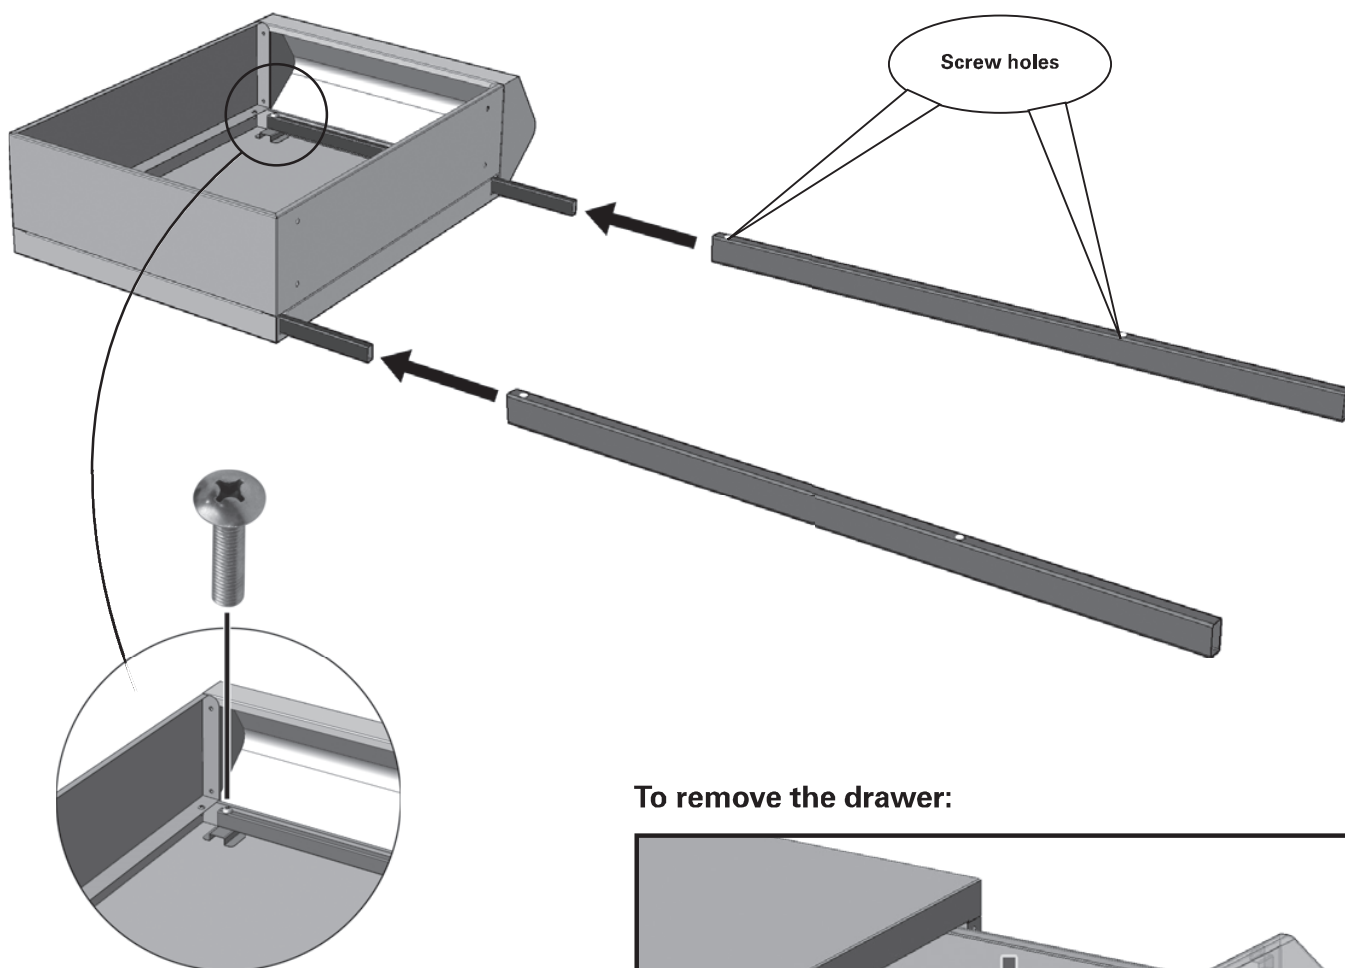


To remove the drawer:

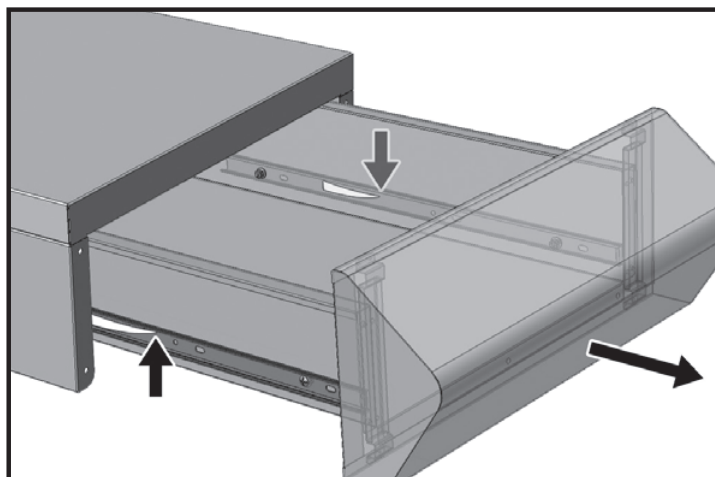

12 Attach The Left Side Shelf


What You Need:

4 x 12mm screws

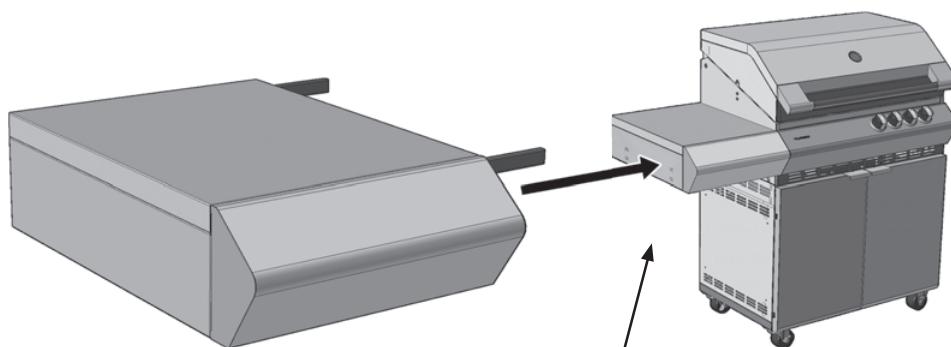

Slide the side shelf's rails into the left side of the barbecue. When positioned correctly, the shelf should line up with the barbecue.

Fix 4 screws through the side shelf and into the barbecue.

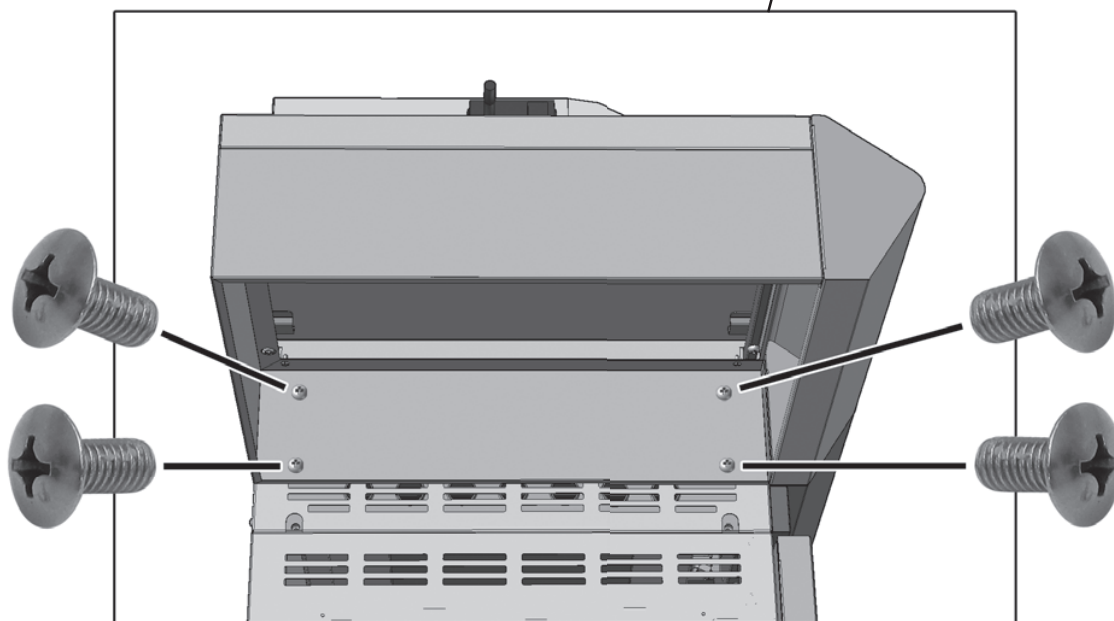

13 Connect The Rods To The Side Burner Or Right Side Shelf

What You Need:

4 x 28mm screws






4 x 12mm screws



Attach the side burner in the same manner as the side shelf.

Use 4 x 30mm screws to attach both rods to the side burner.

Then slide the side burner into the barbeque and secure it using 4 x 12mm screws.

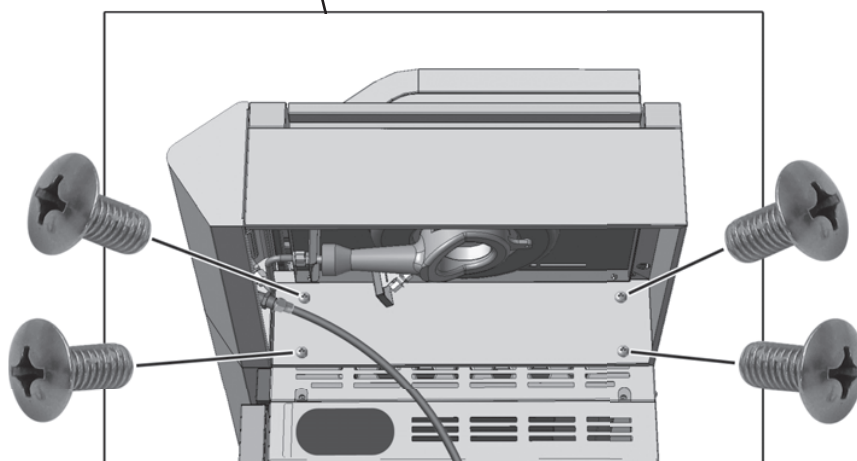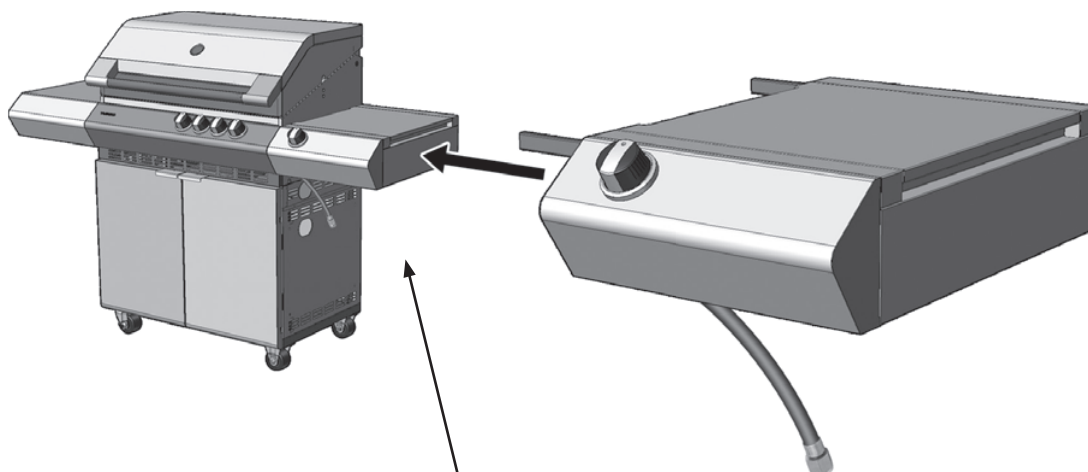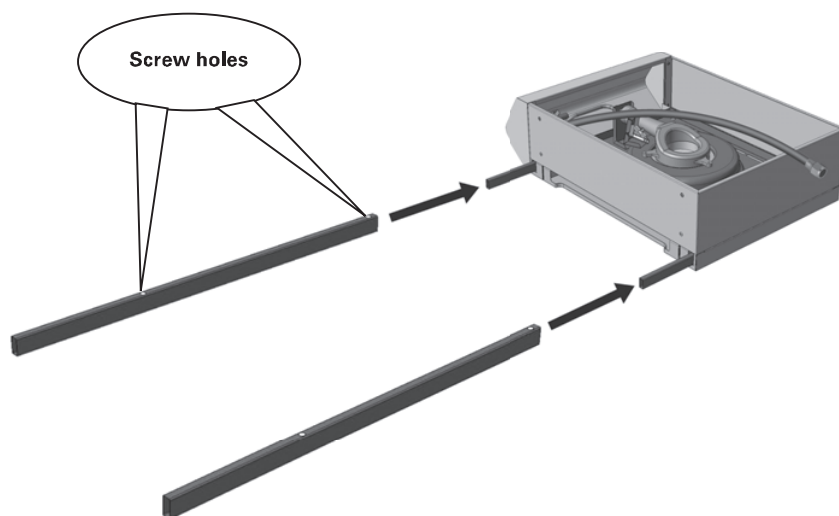

14a



Connect The Gas Hoses (Side Burner Models Only)



Remove the cap from the 'F' pipe, underneath the side burner.

Note: The doors are not shown for clarity.

Important: Use two spanners to loosen the connection. One to hold the fitting, one to loosen the cap.

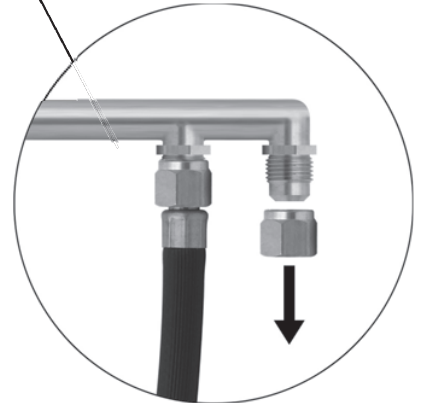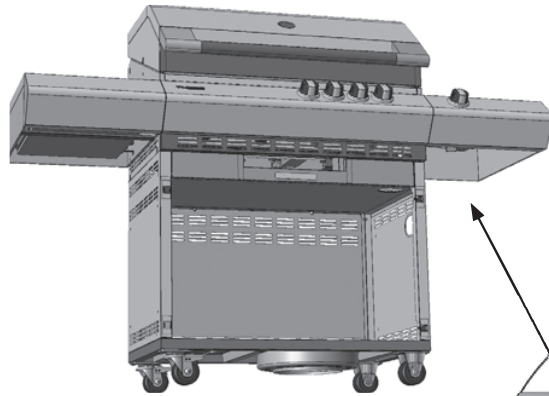



14b

(Side Burner Models Only)



Thread the regulator hose through the cutout in the right side panel. Connect the regulator hose to the outlet of the 'F' pipe, as shown.

Important: Use two spanners to tighten the connection. Backyard fires can be caused by connections which are only hand tightened.

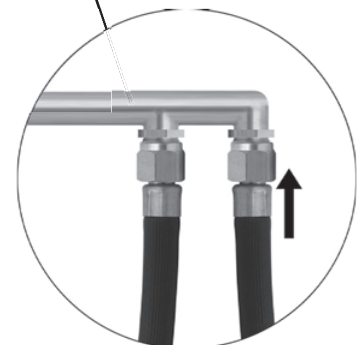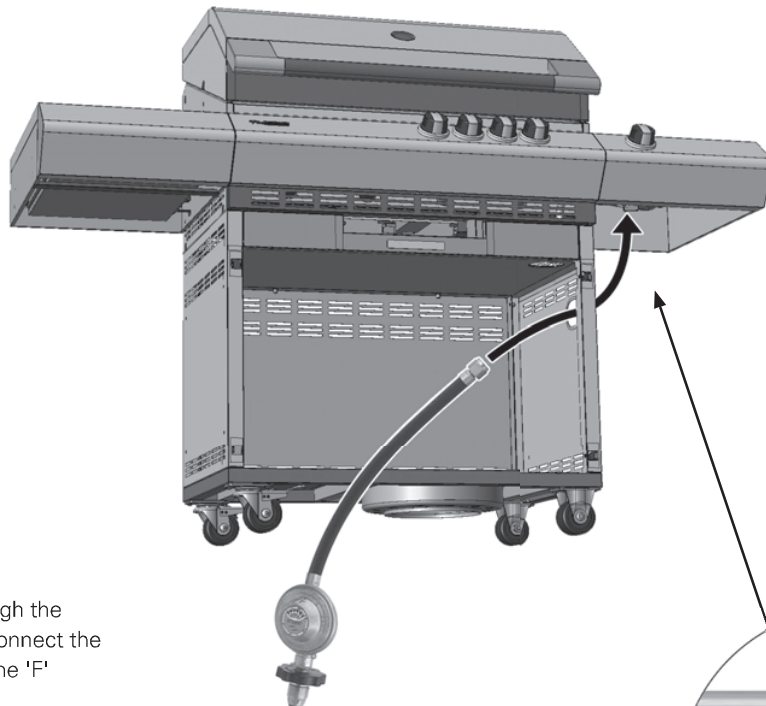

14c



(Side Burner Models Only)



Feed the hose from the upper outlet of the side burner's 'F' pipe's through the side panel and top shelf, and connect it to the barbeque inlet.


Important: Use two spanners to tighten the connection: one to hold the gas inlet pipe, the other to turn the hose fitting. You will find spanner access holes in the side of the barbeque frame.

Before connecting the hose to the gas supply, refer to your barbeque instructions for directions on leak testing and general gas safety.

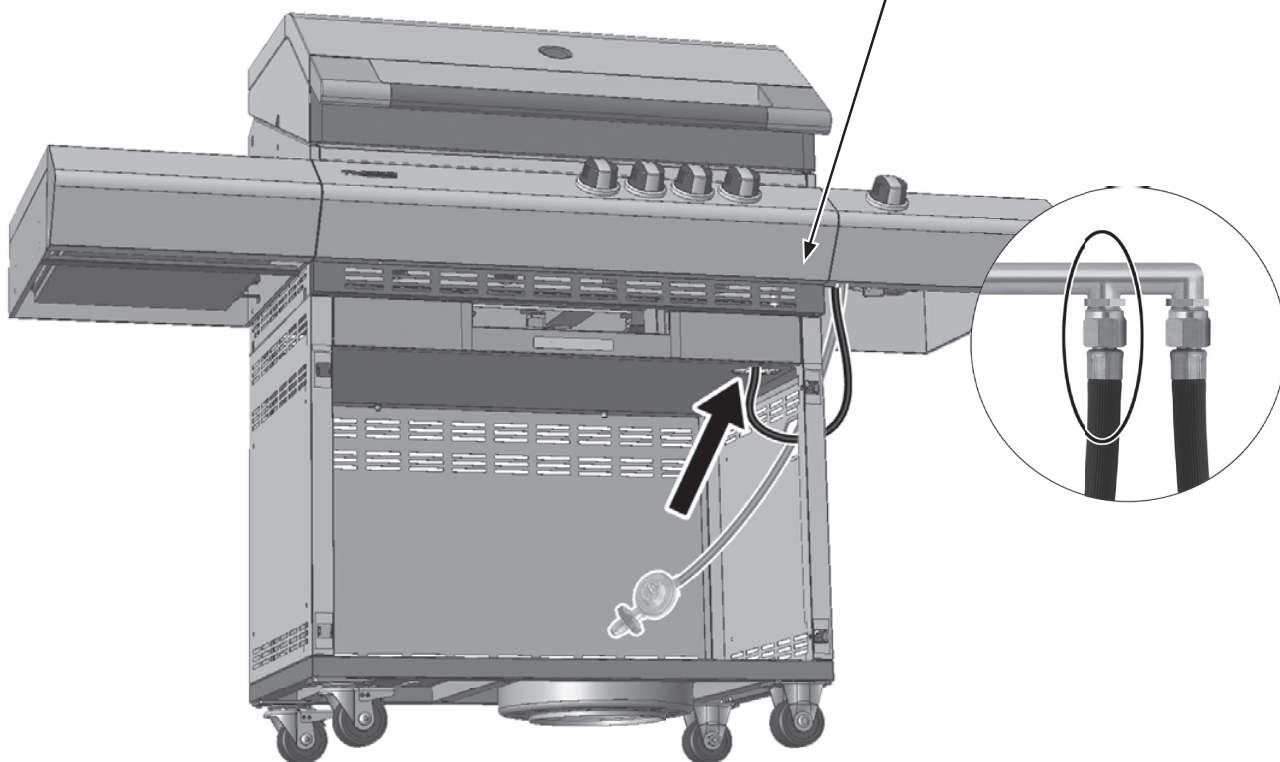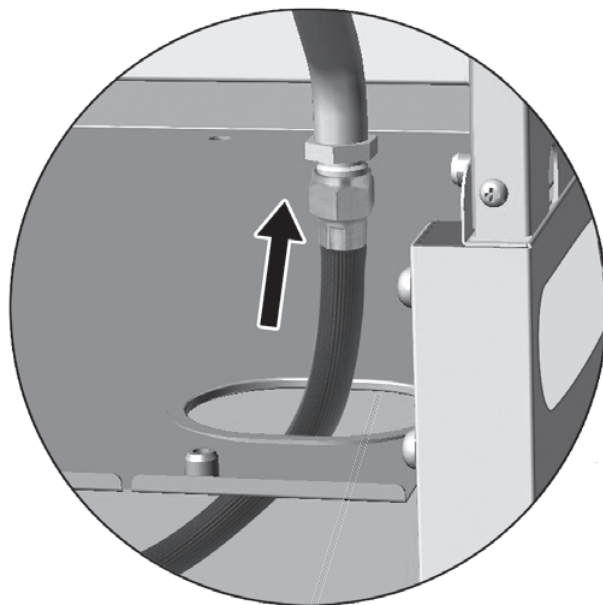

Your Ziegler & Brown Turbo cabinet assembly is now complete.


Exploded drawing of f MC2TCJ, MC2TEJ

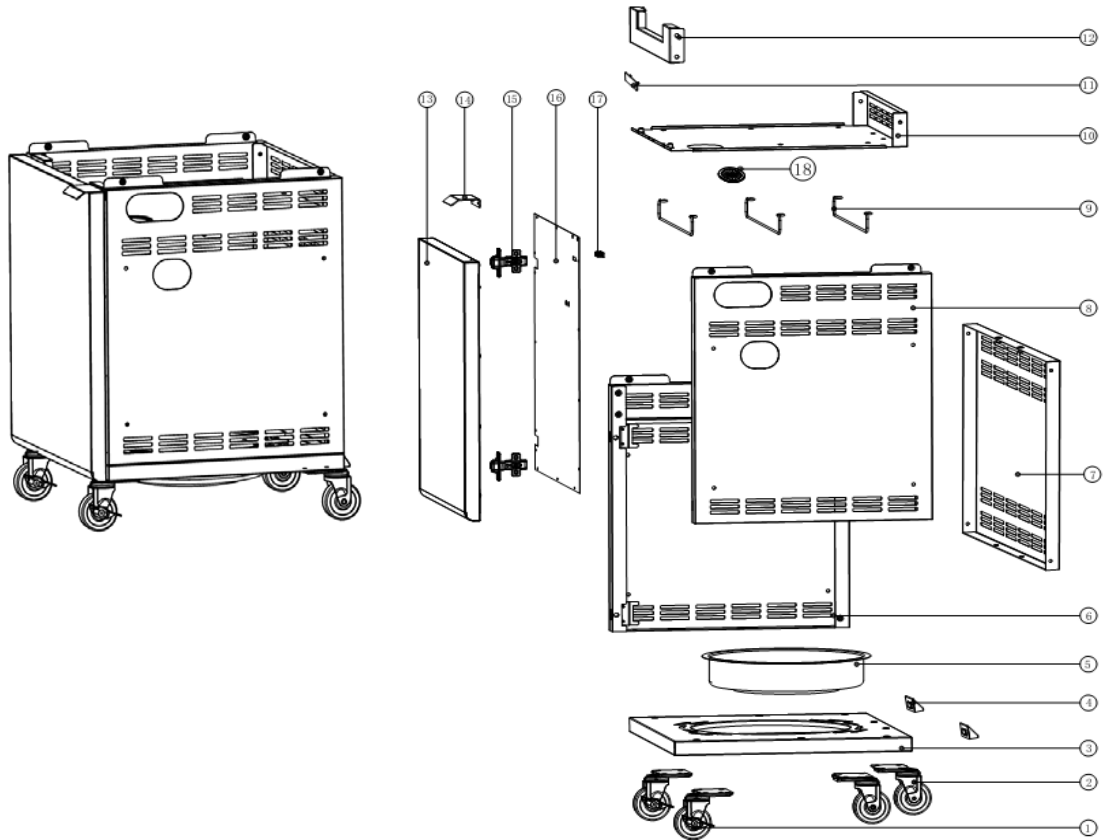

Parts list of MC2TCJ, MC2TEJ

Diagram#	GLG Part Code	Part description	QTY Per BBQ	QTY Per Part Code	Remark
1	SKY21-3109	swivel castor with brake	2	1	
2	SKY21-3110	swivel castor without brake	2	1	
3	SKY21-2541-6	cart base panel	1	1	
4	SKY21-3130-6	castor dress cover	2	1	
5	SKY21-2438-6	cylinder support ring	1	1	
6	SKY21-2440-6	cart left side panel	1	1	
7	SKY21-3698-6	cart rear panel	1	1	
8	SKY21-2543-6	cart right panel	1	1	
9	SKY53-0532	cart storage rack	3	1	
10	SKY21-3697-6	cart top panel	1	1	
11	SKY20-1165-Q	cart frame magnet panel	1	1	
12	SKY21-2546-6	cart front frame	1	1	
13	SKY20-1163-T	cart door outer-powder coating	1	1	MC2TCJ only
13	SKY20-1163-T	cart door outer-stainless steel	1	1	MC2TCJ only
14	SKY20-1128-P	cart door handle-powder coating	1	1	MC2TEJ only
14	SKY20-1128-P	cart door handle-stainless steel	1	1	MC2TEJ only
15	SKCGE221-23000	cart door hinge	2	1	
16	SKY21-2549-6	cart door inner	1	1	
17	SKY20-1134	cart door magnet	1	1	
18	SKY31-0193	cart top panel seal	1	1	

Exploded drawing of MC4TCJ, MC4TEJ

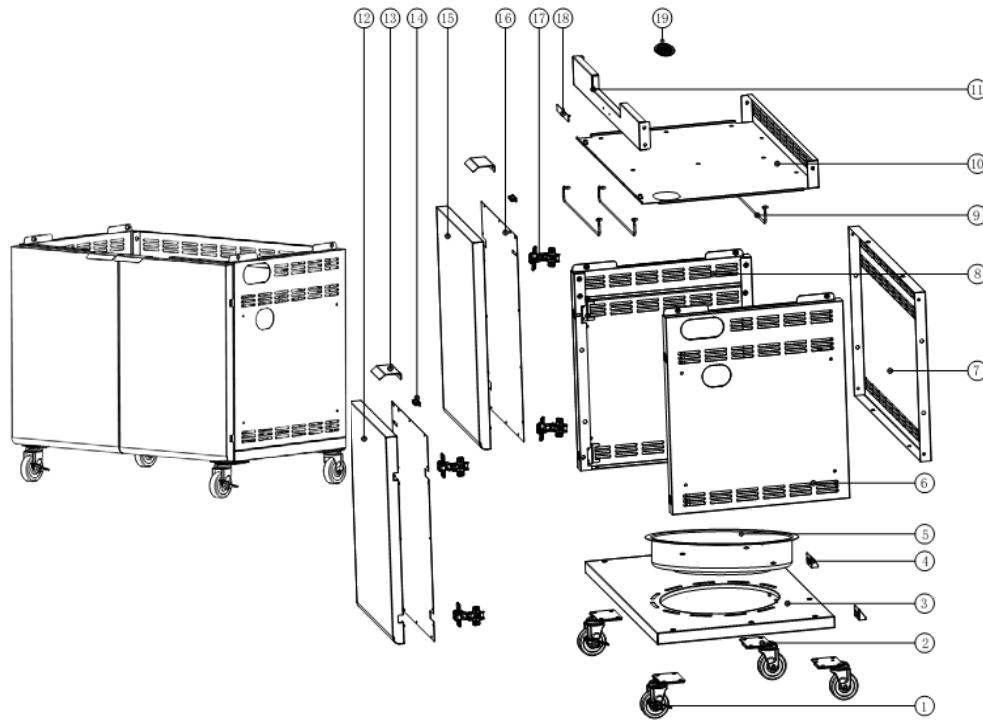

Parts list of MC4TCJ, MC4TEJ

Diagram#	GLG Part Code	Part description	QTY Per BBQ	QTY Per Part Code	Remark
1	SKY21-3109	swivel castor with brake	2	1	
2	SKY21-3110	swivel castor without brake	2	1	
3	SKY21-2497-6	cart base panel	1	1	
4	SKY21-3130-6	castor dress cover	2	1	
5	SKY21-2438-6	cylinder support ring	1	1	
6	SKY21-2446-6	cart right panel	1	1	
7	SKY21-2450-6	cart rear panel	1	1	
8	SKY21-2440-6	cart left side panel	1	1	
9	SKY53-0532	cart storage rack	3	1	
10	SKY21-3696-6	cart top panel	1	1	
11	SKY21-2453-6	cart front frame	1	1	
12	SKY20-1129-T	cart door outer right-powder coating	1	1	MC4TCJ only
12	SKY20-1129-T	cart door outer right-stainless steel	1	1	MC4TEJ only
13	SKY20-1128-P	cart door handle-powder coating	1	1	MC4TCJ only
13	SKY20-1128-P	cart door handle-stainless steel	1	1	MC4TEJ only
14	SKY20-1134	cart door magnet	2	1	
15	SKY20-1123-T	cart door outer left-powder coating	1	1	MC4TCJ only
15	SKY20-1123-T	cart door outer left-stainless steel	1	1	MC4TEJ only
16	SKY21-2486-6	cart door inner	2	1	
17	SKCGE221-23000	cart door hinge	4	1	
18	SKY20-1132-Q	cart frame magnet panel	1	1	
19	SKY31-0193	cart top panel seal	1	1	

Your Ziegler & Brown Turbo Barbeque Range:



- **2 burner** with optional side burner



- **4 burner** with optional side burner